


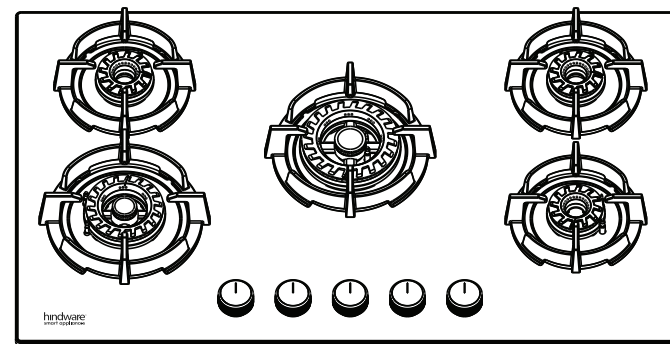

INSTALLATION MANUAL *for* BUILT-IN HOBS

hindware CARE
HELPLINE 1800-103-3300
(TOLL FREE) +91-8069166666
Open : 8 am to 8 pm, all 7 days
✉ : wecare@hindware.co.in

WhatsApp Support
+91-9642500004

DOWNLOAD
our mobile app
hindware Hindware
Smart Appliances
AVAILABLE AT

HINDWARE HOME INNOVATION LIMITED :
68, Echelon Institutional Area, Sector-32, Gurugram, Haryana 122 001, India.
☎ 0124-2889300 | 🌐 www.hindwareappliances.com

Follow us on : [Twitter](#) | [YouTube](#) | [Instagram](#) | [Facebook](#) / hindwareappliances

*Thank you for purchasing our products. Before operation,
please read this manual thoroughly and retain for future reference.*



CONTENTS

1) For Your Safety	3
2) Installlation	3
3) Children's Safety	3
4) Cleaning	2
5) Building into fitted Kitchen Units	4-5
6) Instruction for installation technician.	6
7) Service and parts	7
8) Intructions for use	8
9) Cleaning & Maintenance	9
10) Trouble Shooting Guide	10
11) Warranty terms and conditions	11

FOR YOUR SAFETY

- These instructions have been drawn up for your safety while installing the gas hob. you are therefore requested to read them carefully before installing and using the appliance.
- Keep this instruction manual for future reference. If the appliance is sold or removed, make sure the manual is handed over to the new user.

INSTALLATION

- The appliance should be installed by a qualified person.
- It is risky to modify or attempt to modify the characteristics of this product.
- After removing the appliance from the packaging, make sure that it is undamaged and in perfect condition. Otherwise, contact your dealer before putting the appliance into operation.
- Make sure that the appliance is supplied with the type of gas indicated on the relative sticker next to the mains gas connection pipe.
- The manufacturer declines all responsibility in case of failure to comply with the accident prevention regulations.
- Ensure that the room is ventilated by keeping the air intakes open or by installing a cooker hood with discharge pipe. If the appliance is used intensively for a long time the effectiveness of the ventilation will have to be increase, for example by opening a window increasing the power of any electric exhaust fan.
- This product is designed for domestic home cooking and not for commercial purposes.
- After using the appliance, make sure that all controls are in OFF position.


CHILDREN'S SAFETY

- This appliance must be used only by adults. Make sure that children do not touch the controls or play with the appliance.
- The external parts of this appliance will heat up during cooking and remain hot for some time even after it is switched off. Keep children away.


CLEANING

- Always keep the appliance clean. Food residues may cause fire risks.


BUILDING INTO FITTED KITCHEN UNITS

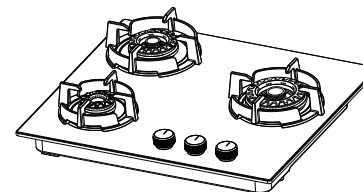


60cm 3 Burner

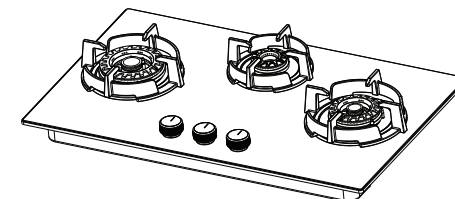

75cm 3 Burner

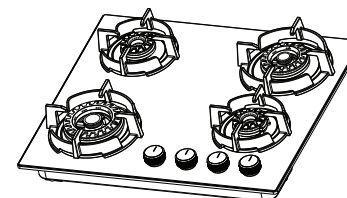


60cm 4 Burner

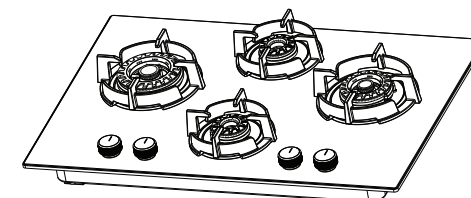


75cm 4 Burner


BUILDING INTO FITTED KITCHEN UNITS

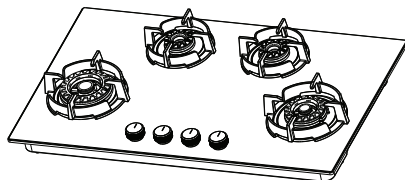


86cm 4 Burner

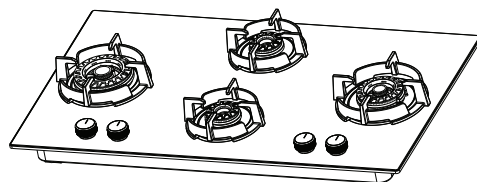

90cm 4 Burner

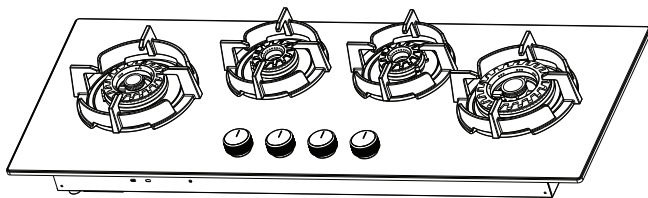

100cm 4 Burner

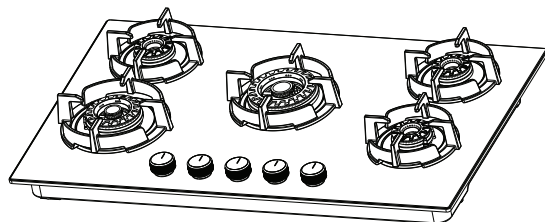

86cm 5 Burner

INSTRUCTION FOR INSTALLATION TECHNICIAN

CAUTION

- This appliance must be installed and used only in rooms with permanent ventilation adhering to local standards.

INSTALLATION PREMISES


- For proper operation of a gas hob, the air that is necessary for combustion of gas must be able to flow into the room naturally.
- The air must flow into the room directly through openings in the outside walls. Make sure the openings are wide enough to allow air to flow in freely. This opening must be constructed so that it will not be obstructed, preferably on the side opposite to that on which the appliance is installed, the necessary air may be taken from an adjacent room, provided that:
 - this room is not a bedroom or a hazardous environment
 - this room is not in a vacuum
 - the ventilation between the room where the appliance is installed and the adjacent room is guaranteed by permanent openings.

DISCHARGE OF FLUE GASES

- The gas hob must discharge its flue gases through hoods connected directly to flues or the outdoors.
- If it is not possible to install hood an electric fan must be installed on the outside wall or the window of the room, provided it is possible for the ventilation opening to be increased in proportion to the delivery rate of the fan.

CONNECTION TO THE GAS SUPPLY

- The gas connection must be made in accordance with local standards when installing a safety lap at the pipeline.
- The appliance leaves the factory tested and set for the type of gas indicated on the plate inside the bottom guard, close to the gas connection pipe.
- There are two types of condition for connection of gas cooker. Make sure that the correct method is chosen.
- Ensure that the gas inlet pipe is free of dust, and put the rubber tubing onto the gas inlet value marked with a red line. fasten it with hose clamp.

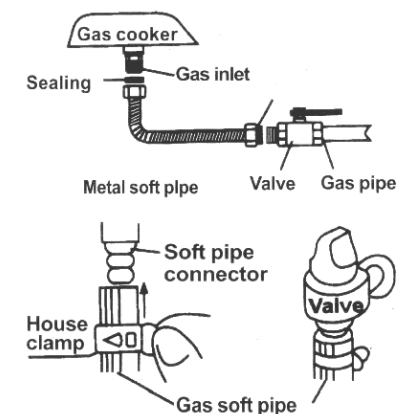

- Make the connection to the gas system using a soft gas pipe and regulation unions, complying with local standards. The inner connector pipe dimension is 9.5 mm and the length of gas pipe should be less than 2 meters long.
- Make the connection to the gas system using a rigid metal pipe and regulation unions, or stainless steel hose complying with local standard.
- If metal hoses are used, make sure that they do not come in contact with mobile parts and are not crushed. This must also be checked if the hob is to be combined with an oven.
- When making the connection, make sure not to apply stress of any kind to the appliance.
- When the installation is complete, always check that all the unions are absolutely tight using a soapy solution. Never use a flame to make this check.

SERVICE AND PARTS

- Before leaving the factory, the appliance was tested and adjusted by specialist and skilled staff to give the best operating result.
- Any subsequent necessary repairs or adjustments must be carried out with the greatest care and attention. For this reason, we strongly advise you to always contact the dealer, who sold you the appliance or our nearest service center, specifying the nature of the problem, the model of the equipment, the product model number and the serial number.
- In case of malfunctions, never attempt to repair the appliance yourself. Repairs by unskilled persons may cause damage and accident.
- First of all, please refer to the contents of this manual. If you do not find any related information, please contact your nearest service centre.
- Servicing work for this appliance must be carried out by an authorized technical service centre.
- Always request the use of original spare parts.

INSTRUCTIONS FOR USE

GAS HOB CONTROL KNOBS

The symbols on the control knobs mean the following:



No gas supply/control knob off



Medium gas supply



Ignition position/Maximum gas supply



Minimum gas supply

LIGHTING THE BURNERS

- To obtain a flame more easily, light the burner before placing a cooking utensil on the pan stand.
- To light a burner, proceed as follows: For version with lighting integrated in the control knob, depress the burner's knob and turn anticlockwise to the maximum flow setting, or press the button if the appliance has individual lighting.
- Ensure that the flame is even and turn the control knob to adjust the flame as required. If battery for igniter is flat, place a flame near the burner and follow the steps mentioned above. If the flame does not light after a few attempts, check and make sure the burner cap and flame cap are correctly positioned. To turn off the flame, turn the control knob clockwise to the symbol.
- Before removing cookware from the burners, always lower or turn off the flame.
- If cooking processes involve fats or oils, be careful with the foods you are cooking because these substances may catch fire brought to high temperatures.


CLEANING AND MAINTENANCE

GENERAL CLEANING

- Wash the enameled parts with lukewarm water and detergent, do not use abrasive products which might damage the parts.
- The flame caps and burner caps can be cleaned thoroughly by using hot water and detergent.
- For stubborn dirt, use ordinary non-abrasive detergents. We strongly advise you not to use scouring pads, steel wool or acids for cleaning.

HOBS

- Clean the hob regularly with a soft damp cloth with lukewarm water and a small amount of liquid detergent.
- Do not use the following products
 - Household detergents or bleaches.
 - Soaped scouring pads not suitable for non-stick utensils.
 - Stain removers for baths and sinks.
- If the hob gets dirty, use specific commercial products approved by local authorities.

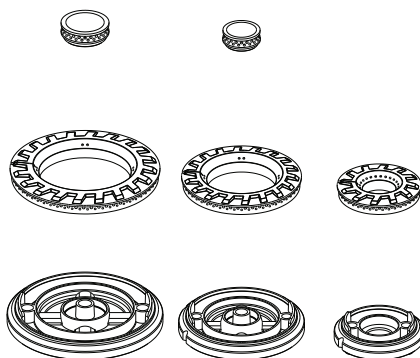

IGNITION PLUG

- Automatic burner ignition is provided (when installed) by a ceramic plug and metal electrode. Periodically clean these parts thoroughly.
- In addition, to avoid ignition difficulties, check that the cavities in the burner are not obstructed. To remove deposits from the burner cavities, remove the cap and separate the two parts (see diagram above). After cleaning, put these parts back together and place them back correctly. After washing, put back the hob pan stands and do a final check on the positioning.

ROUTINE MAINTENANCE

- Check the condition and efficiency of the gas pipe and regulator periodically. If anomalies are found, do not repeat repairs but have the faulty part replaced.
- To ensure good performance and safety, the gas regulator taps must be greased periodically.
- Periodic lubrication of the taps must be carried out only by a qualified person, who must also be contacted if the appliance malfunctions.

TROUBLE SHOOTING GUIDE

CAUTION

- This appliance must be installed and used only in rooms with permanent ventilation adhering to the local standards.

TROUBLE	CAUSE	REMEDY
Does not ignite	a) No gas supply. Hob is not turned on. b) Air remains in the gas piping. c) Bent or crushed rubber tube. d) The safety valve is not opened. f) The batteries are flat.	a) Turn off the gas hob and turn on again. b) Repeat ignition until all the air inside the piping is purged out completely. c) Straighten it, or replace it. d) Clean and dry then. e) Depress the ignition knob and turn counter – clockwise until a clicking sound is heard, make sure that the burner has been lit. Press the ignition knob for 3-4 seconds and release it. f) Change the batteries.
Smell of gas	a) Cracks or holes in the rubber tube. b) Rubber tube not connected properly. c) Gas hob failure.	a) Replace it with a new one. b) Connect the rubber tube properly. c) Request the dealer to repair.
Combustion is abnormal	a) Air supply is not properly adjusted. b) Burner is not fitted properly. c) Flame outlet of the burner is clogged.	a) Adjust it properly. b) Fix the burner properly. c) Clean the clogged part. d) Request the dealer to repair.

WARRANTY TERMS AND CONDITIONS:

- Your appliance warranted for a period at 24 months from the date of purchase.
- This warranty is confined to first purchaser only.
- Burners and Gas Valves-5 years warranty.
- Micro-switch, Spark Plug, Jets, Generator and any manufacturing defect carries a warranty of 24 months from the date of purchase. Warranty doesn't cover knobs, plastic and rubber parts etc. for the Hob.
- This warranty does not cover defects resulting from accidents or damage while in transit
- Defective Hob along with the original warranty card and purchase bill has to be produced to the authorized/designated service centre for rectification by the buyer during working hours
- Whether defective item or components are to be replaced or repaired shall be left to the sole discretion of Hindware Home Innovation Limited. In case of any replacement, the defective part becomes the property of Hindware Home Innovation Limited.
- Replacement of parts would be purely at discretion of Hindware Home Innovation Limited alone. In case the replacement of the entire unit is being made, (subject to the sole discretion of Hindware Home Innovation Limited), the same model shall be replaced and in the event such model has been discontinued, it shall be replaced with the model of price equivalent at the time of purchase.
- This warranty shall not cover any consequential or resulting liability, damage or loss to property or life arising directly or indirectly out of any defect in the Hindware Home Innovation Limited Products. The company's obligation under this warranty shall be limited to repair or providing replacement of defective parts/units as the case may be only under the warranty period.
- In case of any dispute, this warranty is subjected to jurisdiction of Gurgaon courts only.
- The unit must be installed and operated strictly as per the specifications given in the instruction manual provided along with the product.
- While the company will make every effort to carry out repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period of time.

The warranty not applicable in following cases:

1. Proof of purchase invoice in Original and/or Warranty Card is not shown to company authorized service personnel at the time of repair. In such cases service will still be rendered however it will be on chargeable basis as per the standard rates of labor and/or parts (as the case may be), prevailing at that point of time.
2. Installation/repair work is carried out by person/agency other than the authorized company personnel or the product is not installed/used according to the instruction given in instruction/installation manual.
3. Site conditions, where the product is installed, does not confirm to the recommended operating conditions of Product as specified in the instruction manual of product (supplied along with the product).
4. Defect caused by improper, as determined by the company authorized service personnel.
5. Defect is caused due to cause beyond beyond control like lightning, acts of god, abnormal power supply or while in transit from dealer's outlet to purchaser's residence.
6. Damage to the product or any parts due to transportation or shifting is not covered under warranty.
7. This warranty will automatically terminate on the expiry of the warranty period of 24 months from date of purchase, even if the product may not be in use for any time during the warranty period for any reason.

Terms and Conditions for 10 Years Warranty on Toughened Glass

- The product should be used as per the instructions mentioned in the instruction manual.
- The product should be used for domestic purpose only. In case it has been used for commercial purpose the warranty is not valid.
- The product should not be misused and should be serviced at regular intervals at least once a year by an authorized service centre.
- In case the serial number has been deleted, defaced or altered, the warranty stands null and void.
- In case the GST paid Bill/Cash memo is not presented during the claim, the warranty is not valid.
- In any modification or alteration of any nature is made on the product or any repair work is carried out by persons not authorized by the company the warranty is not valid.
- In case the glass breaks while using the Pathri Tawa or Gas Tandoor then the warranty is not valid.
- The company is not responsible for any consequential losses arising out of misuse of the appliance or due to non-observance of necessary precautions in using L.P gas/electric power.
- The maximum number of free replacements will be limited to 2 times within a time span of 10 years.
- Only the glass will be replaced free of charge. The labor cost and service visit charges will have to be paid by the customer.
- Customer will have to produce the warranty card and the GST paid cash memo to avail this warranty.
- In case the Gas Valve is changed from LPG to PNG from outside the company authorized service centres, then the warranty will not be valid.
- In case of any problem, the decision of the company will be final.
- The customer can get in touch with us at:
TOLL FREE 1800-103-3300 or +91 80691 66 666
EMAIL: wecare@hindware.co.in

[illegible][illegible]